Professional compact MPT1327 handheld transceivers

Common Information (all models)



HX402T/412T/422T/482T(U) **Entry**



HX405T/415T/425T/485T(U) Advanced, 8-key



HX406T/416T/426T/486T(U) Advanced, Full Keypad

Introduction

This guide covers the 'basics' of your radio's operation. To meet your exact requirements the radio may have been customised by your Entel authorised dealer. These features will be explained in a separate guide issued by the dealer.

Table of Contents

Common Information (all models)	Page
Certification	2
Radio / Battery Care	3
Battery Care / Information	4
Packing List	5
Optional Accessories	5 & 6
Preparing Your Radio For Use	6 & 7
HX402T/412T/422T/482T(U)	
Feature List	8
Controls & Indicators	9
HX405T/415T/425T/485T(U)	
Feature List	10
Controls & Indicators	11
LCD Icons	12
HX406T/416T/426T/486T(U)	
Feature List	14
Controls & Indicators	15
LCD Icons	16

Certification

Declaration of Conformity

We Entel UK Limited of:

320 Centennial Avenue Centennial Park Elstree Borehamwood Hertfordshire WD6 3TJ United Kingdom

Declares under our sole responsibility that the product range:

HX400T VHF/UHF Handheld Radio Transceiver

Conforms to the following standards or other nominative documents:

 EN 300 086-2 V1.2.1, EN 301 489-1 V1.8.1:2008-04, EN 301 489-5 V1.3.1:2002-08, EN 60950-1:2006, in accordance with Directive 99/5/EC.

Serial	Number	•											

M Austin

Quality Manager

Date: October 2010





Radio Care

Warranty

The HX4XXT comes with a 24 month warranty, for details see our full terms & conditions.

Advice

- Do not use options or accessories not specified by Entel
- Ensure that the radio is used within the parameters for which it was designed
- Please switch the transceiver off before connecting optional accessories

Warning

Turn the transceiver off in the following locations:

- In explosive atmospheres (flammable gas, dust including metallic & grain powders etc)
- Whilst taking on fuel or while parked near a fuel station
- · Near explosives or blasting sites
- In aircraft, medical institutions or near persons known to be wearing a pacemaker

Caution

- Do not disassemble or modify the transceiver for any reason
- Do not transmit while touching the antenna terminal or any exposed metallic parts of the aerial as this may result in a burn
- Please check and observe regulations in your country with regards to use whilst driving

End of Life Disposal

 When your Entel transceiver reaches the end of its useful life, please ensure that the unit is disposed of in an environmentally friendly way.
 For country specific information please see www.entel.co.uk/recycling

Battery Care

Introduction

Your Entel radio is supplied with a high performance Lithium-Ion (Li-Ion) battery.

These batteries:

- Extend talk time
- Reduce the batteries' size and weight
- Do not suffer from 'memory effect' that reduces the life of Ni-Cad and NiMH hatteries
- Have a low toxicity, therefore reducing the impact on the environment

Battery Pack Precautions

- Switch the transceiver OFF before charging
- Charge the battery pack before use
- Do not recharge the battery pack if it is already fully charged as this will use one its charge cycles and may shorten its life
- Charge the battery in accordance with the instructions enclosed with your charger
- Do not charge the transceiver and/or battery pack if they are wet

Battery Care / Information

The battery pack includes potentially hazardous components. Please:

- Do not disassemble or reconstruct battery
- Do not short-circuit the battery
- Do not incinerate or apply heat to the battery
- Do not immerse the battery in water or get it wet by other means
- Do not charge the battery near fires or under direct sunlight
- Use only the specified charger and observe charging requirements
- Do not pierce the battery with any object or strike it with an instrument
- Do not use the battery pack if it is damaged in any way
- Do not reverse-charge or reverse-connect the battery
- Do not touch a ruptured or leaking battery

If liquids from the battery get on your skin or into your eyes, immediately:

- Wash your eyes out with fresh water avoiding rubbing them.
- Seek medical treatment.

Battery Pack

 
- If a battery is not to be used for an extended period of time (e.g. several months) remove the battery pack from the equipment and store in a cool and dry location (around 0°C) part charged. <u>Do not fully discharge the</u> <u>battery before storage</u>.
- Each charge cycle reduces the battery's life.
 Minimise the number of times you charge your battery especially in hotter environments which further shortens a battery's life.

Battery Communications

Each battery used with your radio has a microprocessor fitted, which logs the number of times your battery has been charged. On the advanced 8-key and 20-key display models, the number of times the battery has been charged, together with the remaining charge cycles available, will be shown during switch on. This information may also be accessed and displayed via the menu. (If not de-activated by your dealer)



The warranty on all batteries is 12 months or 450 charge cycles, whichever is the sooner. After 420 cycles, at switch on the radio will emit a series of short tones, and on LCD models a waste bin icon will flash to alert you to the need to buy a new battery.



After 450 cycles, at switch on the radio will emit a series of long beeps, and LCD models the message will change to CHARGE COUNT EXCEEDED REPLACE BATTERY. The radio will continue to operate but its operational time may be reduced, eventually failing all together

BATTERY COUNT EXCEEDED REPLACE BATTERY

Note: only genuine Entel batteries should be used. Only genuine batteries offer the battery charge count feature informing you when the battery is reaching the end of its useful life. Genuine batteries ensure customer satisfaction delivering the expected capacity and endurance. This cannot be guaranteed with sub standard, potentially dangerous battery packs from 3rd party manufacturers.

Packing List

- HX4XX Radio
- CNB450E Rechargeable 1800mAh Li-lon battery
- CBH450 Spring loaded belt clip
- CATXXX Antenna
- User guide CD

Optional Accessories

Battery & Charger Options

CNB450E	Spare 1800mAh Lithium-Ion battery pack with rear clip
CSAHX	I-way dual slot intelligent rapid charger, 100-240v
CSBHX	6-way dual slot intelligent, rapid charger, 100-240v

Carry Options

CMPI/450

CFC450 Soft leatherette case with clear window finished in black with carry strap	
CLC452 HX4X2 heavy duty black leather case with strap & belt loop	
CLC455 HX4X3 / HX4X5 heavy duty black leather case with strap & belt loop	
CLC456 HX4X6 heavy duty black leather case with strap & belt loop	
CBH450 Spare spring loaded belt clip	

Compact medium duty speaker microphone with earpiece iack

Audio Accessory Options

C1 11 17 150	Compact mediam daty speaker microphone with carpiece jack
CMP450	Heavy duty submersible speaker microphone
EHP9	D-shaped earpiece (plugs into CMP1/450 or CMP450 above)
EA12/450	D-shaped earpiece with in-line PTT/microphone & VOX*
EA 5/450	Earpiece microphone with transparent acoustic tube & VOX*
EA 19/450	D-shaped earpiece with boom microphone and in-line PTT & VOX*
EHP450	D-Shaped earpiece (connects directly to radio)
EPT40/450	Bone conductive earpiece microphone with PTT
CXR5/450	Bone conductive skull microphone with in-line PTT
CXR16/45	D-shaped earpiece and throat microphone with in-line PTT
CHP1/450	Light weight single earpiece headset with in-line PTT & VOX*
CHP450HS	Single earpiece ear defender headset with boom mic and in line PTT for hard hat & VOX*
CHP450HI	Double earpiece defender headset with boom mic and in line PTT for hard hat & VOX*
CHP450D	Double earpiece headband defender headset with boom mic and in line PTT & VOX*
CHP450B7	Bluetooth double earpiece headband defender headset with boom mic and ear cup PTT
* VOX = V	pice Operated Transmit (hands free operation)

Bluetooth option board in radio is required to use Bluetooth audio accessories.

Optional Accessories cont...

Antenna Options

CXW400 Antenna adapter for external aerial connection

CAT420 Helical antenna VHF
CAT480 Whip antenna UHF
CAT480S Stubby antenna UHF
CAT410S-78 78MHz compressed antenna
CAT410S-85 85MHz compressed antenna

CAT410S 66-88MHz uncut compressed antenna

CAT400-40 30-50MHz antenna

For complete up to date list of optional accessories visit www.entel.co.uk

Preparing Your Radio For Use

Attaching / Removing The Battery Pack

- To attach, locate the pegs on the bottom of the battery and place into the slots on the radio. Then press the top of the battery against the radio until you hear a click.
- To remove, slide the two latches on the side of the battery down and pull the battery away from the top of the radio.

Attaching / Removing The Belt Clip

- To attach, press the clip into the slot on the back of the battery and slide down until you hear a "click".
- 2 To remove, pull the tab (a) towards the belt clip. Then slide the belt clip upwards (b).







Preparing Your Radio For Use cont...

Attaching / Removing the Aerial

- To attach, carefully align the aerial with the socket. Screw in the aerial clockwise (taking care not to cross the thread) until it is seated firmly against the top of the radio.
- To remove, unscrew the aerial anti-clockwise.





Attaching / Removing Audio Accessories

- To attach, remove the accessory cover by unscrewing the locking screw anti-clockwise (store the cover in a safe place). Connect the accessory plug into the radio's socket. Carefully tighten the locking screw clockwise until finger tight (do not tighten with a screwdriver etc).
- To remove, unscrew the locking screw by hand in an anti-clockwise direction (carefully use a coin or screwdriver if too tight). Ensure you re-fit the accessory cover so as to protect the socket.

Charging Your Radio

Several charger options are available. Please refer to your charger user guide.



Turning your radio on

Turn your radio on using the on / off / volume control on the top of the radio. The radio will beep and the LED will briefly illuminate yellow. The beep may be disabled by the dealer.

HX402T/412T/422T/482T(U)

Standard Features:


- 16 position call select control
- Full transmit power output (5 Watts VHF, 4 Watts UHF)
- Dynamic power output (automatically adjusts for optimum performance)
- CTCSS & DCS (analogue & digital squelch) with squelch tail elimination (removes the 'shh' noise)
- · Exceptionally loud and clear audio
- Robust design, exceeds MILSTD-810C/D/E/F
- Environmentally protected to IP55
- 1800mAH Lithium-Ion battery for superior operational time
- Low battery alert indicates when the battery needs recharging via a warning bleep and a slowly flashing red LED

Dealer programmable features:

- · Emergency and lone worker protection calls
- Man down alarm (option)
- · VOX for hands free operation
- High/Low transmit power
- Panic (personal attack) button causes high pitch, high volume, siren tone to be emitted from the radio's speaker
- Key lock button
- · Prefixed minimum volume level and fixed bleep level
- · Conventional channel mode (allows communication away from a base station
- Voice scrambler with 1 code per channel (option)



Controls & Indicators

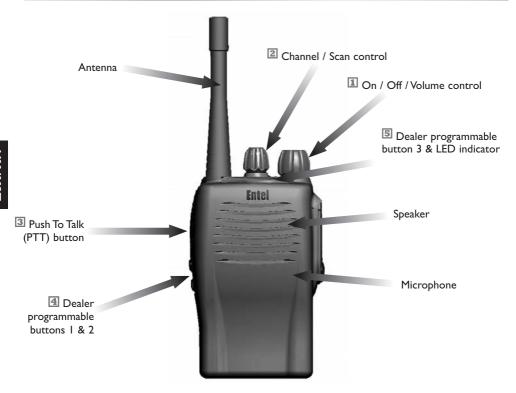

- On / Off / Volume control. Rotate clockwise to turn on and increase volume, anticlockwise to reduce volume and turn off.
- 2 Call select control. Rotate to select the desired radio/group to call.
- 3 Push To Talk (PTT) button. Press to speak and release to listen.
- Dealer programmable buttons I & 2 (ask your dealer for more information).
- Dealer programmable button 3 (ask your dealer for more information) and LED indicator.
 - RED steady = Transmitting
 - RED slow flash _____ = Battery needs re-charging
 - RED medium flash = Radio is out of service
 - GREEN steady = Receiving
 - GREEN medium flash = Radio is in service

HX405T/415T/425T/485T(U)

All the features of the HX402T/412T/422T/482T(U) (see page 8) plus the following features:

Standard Features:


- LCD screen
- Voice scrambler with up to 4 codes per channel
- Intuitive menus (like a mobile phone)
- Info button (user guide built-in to radio)
- · Signal strength indicator
- Battery level indicator

Dealer programmable features:

- Speed dial
- Who's calling (caller ID)
- 255 user contact list (just like a mobile phone)
- Display missed, received & dialled numbers
- Multiple ring / alert tones
- Send / Receive status, text and email messages



Controls & Indicators

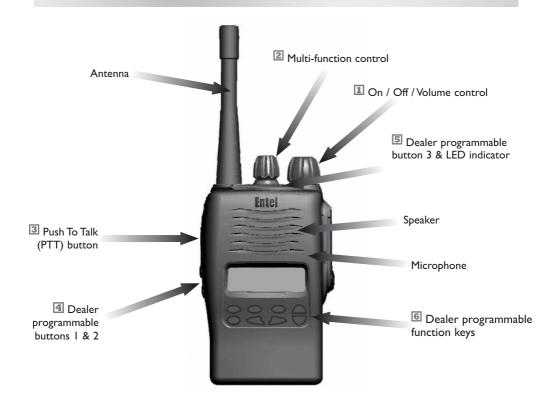

- On / Off / Volume control. Rotate clockwise to turn on and increase volume, anticlockwise to reduce volume and turn off.
- 2 Multi-function dealer programmable control. (ask your dealer for more information).
- 3 Push To Talk button (PTT), press to speak and release to listen.
- Dealer programmable buttons I & 2 (ask your dealer for more information).
- Dealer programmable button 3 (ask your dealer for more information) and LED indicator.
- Dealer programmable buttons (ask your dealer for more information).
 - RED steady = Transmitting
 - RED slow flash = Battery needs re-charging
 - RED medium flash = Radio is out of service
 - GREEN steady = Receiving
 - GREEN medium flash = Radio is in service

LCD Indicators

\searrow
? !
X
\$
OK
吴
\bigcirc
ß
$\Sigma\!\!X$
w
Ĭ
RX/L/M/I
Ī
I

INTENTIONALLY LEFT BLANK

HX4X6

HX406T/416T/426T/486T(U)

All the features of the HX405T/415T/425T/485T(U) (see page 10) plus the following features:

- Standard Features:
- Keypad
- Send free format text messages

Dealer programmable features:

- Edit contact list
- Free dial radio contacts
- Free dial telephone numbers
- Free dial DTMF numbers



Controls & Indicators



- On / Off / Volume control. Rotate clockwise to turn on and increase volume, anticlockwise to reduce volume and turn off.
- 2 Multi-function dealer programmable control. (ask your dealer for more information).
- 3 Push To Talk (PTT) button, press to speak and release to listen.
- Dealer programmable buttons I & 2 (ask your dealer for more information).
- Dealer programmable button 3 (ask your dealer for more information) and LED indicator.
- Dealer programmable buttons (ask your dealer for more information).
 - RED steady = Transmitting
 - RED slow flash _____ = Battery needs re-charging
 - RED medium flash = Radio is out of service
 - GREEN steady = Receiving
 - GREEN medium flash = Radio is in service

HX4X0I

LCD Indicators

•	Message Received	\subseteq
•	Missed Call	3 !
•	Key Bleeps Off	×
•	Silent Profile	*
•	Keypad Locked	□
•	Man Down	OK
•	Lone Worker	*
•	Bluetooth Device Connected	
•	Accessory Connected	₽
•	VOX Enabled	
•	Scramble Enabled	
•	Do Not Disturb	$\Sigma \propto$
•	Whisper Mode	w
•	Battery State	
•	Receive Strength / TX Output Low / Mid / High	RX/L/M/H
•	Call Diverted	₽ ►
•	Speaker Muted	
•	Speaker Unmuted	I

professional's choice'

4					
	<in< td=""><td>tended C</td><td>Country C</td><td>Of Use></td><td></td></in<>	tended C	Country C	Of Use>	
	□ AT □ BE □ BG □ CY □ CZ □ DK □ EE	□ FR □ DE □ GR □ HU □ IS □ IE □ IT	DLT DLU MT NL DNO DPL DPT	□SK □SI □ES □SE □CH □UK	
	□FI	□LV	□RO		

CE0891()

Registered Community Design Application Pending Copyright and Unregistered Design Right Entel UK 2009 All rights reserved